



	Part Number	Model	Year	Desc.	Bearing	Axle Location	JS or PL	Sprocket Location Inside or Outside	No. of Keyways and (size)	A	B	C	D	E
1	092-0424	550	1973 - 90	WHL/AXLE	PB	FRONT	JS	INSIDE	1 ( $\frac{3}{8}$ x 4.0)	1 $\frac{7}{16}$	16 $\frac{3}{4}$	9 $\frac{1}{2}$	2 $\frac{1}{4}$	4 $\frac{3}{4}$
2	092-0423	550	1991- 92	WHL/AXLE	PB	FRONT	JS	INSIDE	1 ( $\frac{1}{2}$ x 4.0)	2.0	18	9 $\frac{1}{2}$	2 $\frac{3}{4}$	5 $\frac{3}{4}$
3	092-0422	550	1993 -	WHL/AXLE	PB	FRONT	JS / PL	INSIDE	1 ( $\frac{1}{2}$ x 4.0)	2.0	27	17 $\frac{1}{2}$	2 $\frac{3}{4}$	6 $\frac{3}{4}$
4	092-0423	690	1990 - 92	WHL/AXLE	PB	FRONT	JS	INSIDE	1 ( $\frac{1}{2}$ x 4.0)	2.0	18	9 $\frac{1}{2}$	2 $\frac{3}{4}$	5 $\frac{3}{4}$
5	092-0422	690	1993 - 94	WHL/AXLE	PB	FRONT	PL	INSIDE	1 ( $\frac{1}{2}$ x 4.0)	2.0	27	17 $\frac{1}{2}$	2 $\frac{3}{4}$	6 $\frac{3}{4}$
6	092-0415	1500	1980 - 87	WHL/AXLE	PB	CENTER	JS	INSIDE / OUTSIDE	1 ( $\frac{1}{2}$ x 4.0)	2.0	21 $\frac{1}{2}$	9 $\frac{1}{2}$	4 $\frac{1}{2}$	7 $\frac{1}{2}$
8	092-0414	1500	1988 - 91	WHL/AXLE	PB	CENTER	JS	INSIDE	1 ( $\frac{1}{2}$ x 11 $\frac{1}{2}$ )	2.0	27	9 $\frac{1}{2}$	2 $\frac{1}{4}$	15 $\frac{1}{4}$
9	092-0411	1500	1992 - 96	WHL/AXLE	PB	CENTER	PL	INSIDE	1 ( $\frac{1}{2}$ x 7.0)	2.0	27 $\frac{1}{2}$	11 $\frac{1}{2}$	2 $\frac{3}{4}$	11 $\frac{1}{4}$
10	092-0405	1500	1997 -	WHL/AXLE	FL	CENTER	PL	INSIDE	1 ( $\frac{1}{2}$ x 8.0)	2.0	24 $\frac{5}{8}$	11 $\frac{1}{2}$	2 $\frac{1}{2}$	10 $\frac{5}{8}$
11	092-0405	1720	1996 - 98	WHL/AXLE	FL	CENTER	PL	INSIDE	1 ( $\frac{1}{2}$ x 8.0)	2.0	24 $\frac{5}{8}$	11 $\frac{1}{2}$	2 $\frac{1}{2}$	10 $\frac{5}{8}$
12	092-0401	1720	1999 -	WHL/AXLE	FL	CENTER	PL	INSIDE	1 ( $\frac{5}{8}$ x 4.0)	2 $\frac{7}{16}$	22 $\frac{1}{2}$	12 $\frac{3}{16}$	2 $\frac{9}{16}$	7 $\frac{3}{4}$

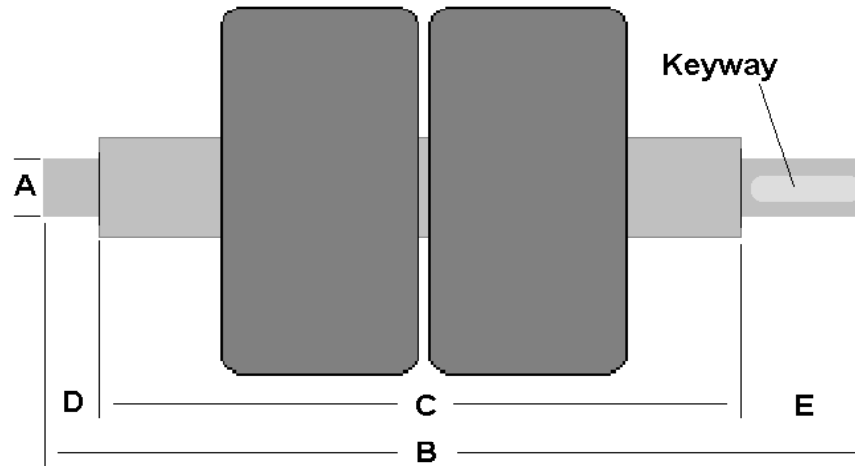


	Part Number	Model	Year	Desc.	Bearing	Axle Location	JS or PL	Sprocket Location Inside or Outside	No. of Keyways and (size)	A	B	C	D	E
1	092-0420	550	1973 -	WHL/AXLE	PB	REAR	JS / PL	INSIDE	1 (1/2 x 4.0)	2.0	25 1/2	17 1/2	2 3/4	5 1/4
2	092-0421	690	1994 -	WHL/AXLE	PB	FRONT	PL	INSIDE	1 (1/2 x 4.0)	2.0	27	17 1/2	2 3/4	6 3/4
3	092-0420	690	1990 -	WHL/AXLE	PB	REAR	PL	INSIDE	1 (1/2 x 4.0)	2.0	25 1/2	17 1/2	2 3/4	5 1/4
4	092-0421	1100	1987 - 92	WHL/AXLE	PB	FRONT	PL	INSIDE	1 (1/2 x 4.0)	2.0	27	17 1/2	2 3/4	6 3/4
5	092-0420	1100	1987 - 92	WHL/AXLE	PB	REAR	PL	INSIDE	1 (1/2 x 4.0)	2.0	25 1/2	17 1/2	2 3/4	5 1/4
6	092-0420	1500	1980 - 96	WHL/AXLE	PB	FRONT	JS / PL	INSIDE	1 (1/2 x 4.0)	2.0	25 1/2	17 1/2	2 3/4	5 1/4
7	092-0404	1500	1997 -	WHL/AXLE	FL	FRONT	PL	INSIDE	1 (1/2 x 4.0)	2.0	23	11 1/2	2 1/2	10.0
8	092-0420	1500	1980 - 83	WHL/AXLE	PB	REAR	JS	INSIDE	1 (1/2 x 4.0)	2.0	25 1/2	17 1/2	2 3/4	5 1/4
9	092-0413	1500	1984 - 91	WHL/AXLE	PB	REAR	JS	INSIDE	1 (1/2 x 4.0)	2.0	25 1/2	17 1/2	2 1/4	5 3/4
10	092-0420	1500	1992 - 96	WHL/AXLE	PB	REAR	JS	INSIDE	1 (1/2 x 4.0)	2.0	25 1/2	17 1/2	2 3/4	5 1/4
11	092-0404	1500	1997 -	WHL/AXLE	FL	REAR	PL	INSIDE	1 (1/2 x 4.0)	2.0	23	11 1/2	2 1/2	10.0
12	092-0404	1720	1996 - 98	WHL/AXLE	FL	FRONT	PL	INSIDE	1 (1/2 x 4.0)	2.0	23	11 1/2	2 1/2	10.0
13	092-0403	1720	1999 -	WHL/AXLE	FL	FRONT	PL	INSIDE	1 (5/8 x 4.0)	2 7/16	22 1/2	12 3/16	2 9/16	7 3/4
14	092-0404	1720	1996 - 98	WHL/AXLE	FL	REAR	PL	INSIDE	1 (1/2 x 4.0)	2.0	23	11 1/2	2 1/2	10.0
15	092-0400	1720	1999 -	WHL/AXLE	FL	REAR	PL	INSIDE	-----	2 7/16	21 1/8	-----	2 9/16	

To Collar

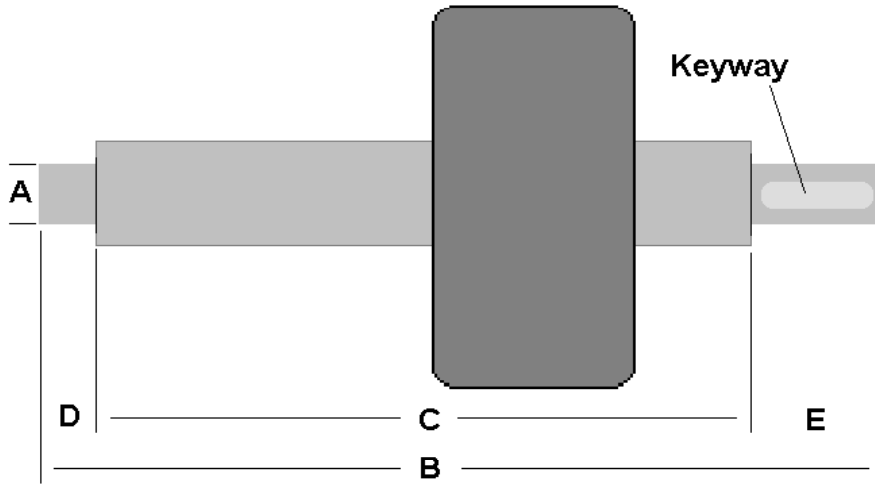

Part Number	Model	Year	Desc.	Bearing	Axle Location	JS or PL	Sprocket Location Inside or Outside	No. of Keyways and (size)	A	B	C	D	E

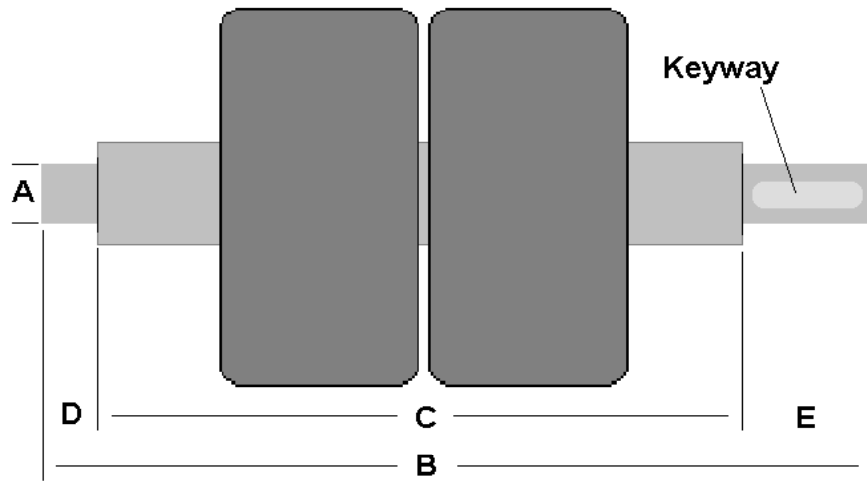

Part Number	Model	Year	Desc.	Bearing	Axle Location	JS or PL	Sprocket Location Inside or Outside	No. of Keyways and (size)	A	B	C	D	E